MILLS LARRY E

# OPERATING AND SERVICE MANUAL

# POWER SENSOR 8483A





### CERTIFICATION

The Hewlett-Packard Company certifies that this instrument was thoroughly tested and inspected and found to meet its published specifications when it was shipped from the factory. The Hewlett-Packard Company further certifies that its calibration measurements are traceable to the U.S. National Bureau of Standards to the extent allowed by the Bureau's calibration facilities, or to the calibration facilities of other International Standards Organization members.

# WARRANTY AND ASSISTANCE

This Hewlett-Packard product is warranted against defects in materials and workmanship. This warranty applies for one year from the date of delivery. Hewlett-Packard will repair or replace products which prove to be defective during the warranty period provided they are returned to Hewlett-Packard. No other warranty is expressed or implied. We are not liable for consequential damages.

Service contracts or customer assistance agreements are available for Hewlett-Packard products that require maintenance and repair on-site.

For any assistance, contact your nearest Hewlett-Packard Sales and Service Office.



### OPERATING AND SERVICE MANUAL

# POWER SENSOR 8483A

#### **SERIAL NUMBERS**

This manual applies directly to instruments with serial numbers prefixed 1416A.

For additional important information about serial numbers, see paragraph on INSTRUMENTS COVERED BY MANUAL.

Copyright HEWLETT-PACKARD COMPANY 1974 1501 PAGE MILL ROAD, PALO ALTO, CALIFORNIA, U. S. A.

MANUAL PART NO. 08483-90001 Microfiche Part No. 08483-90002

Printed: NOVEMBER 1974

#### 1. GENERAL INFORMATION

- 2. This Operating and Service Manual contains information about incoming inspection, performance tests, adjustments, operation, troubleshooting and repair of the Model 8483A Power Sensor.
- 3. On the title page of this manual below the manual part number is a "Microfiche" part number. This number can be used to order a 4 x 6-inch microfilm transparency of the manual.

# 4. Instruments Covered by Manual

- 5. This instrument has a two-part serial number. The first four digits and the letter comprise the serial number prefix. The last five digits form the sequential suffix that is unique to each instrument. The contents of this manual apply directly to instruments having the same serial number prefix(es) as listed under SERIAL NUMBERS on the title page.
- 6. An instrument manufactured after the printing of this manual may have a serial prefix that is not listed on the title page. This unlisted serial prefix indicates that the manual for this instrument is supplied with a yellow Manual Changes supplement that contains "change information" that documents the differences.
- 7. In addition to change information, the supplement may contain information for correcting errors in the manual. To keep this manual as current and accurate as possible, Hewlett-Packard recommends that you periodically request the latest Manual Changes supplement. The supplement for this manual is keyed to this manual's print date and part number, both of which appear on the title page. Complimentary copies of the supplement are available on request from your nearest Hewlett-Packard office.

8. For information concerning a serial number prefix not listed on the title page or in the Manual Changes supplement, contact your nearest Hewlett-Packard office.

### 9. Description

- 10. The Power Sensor, in conjunction with a compatible power meter (such as the HP Model 435A), is designed to measure average power from -35 to +20 dBm, ( $\approx 0.3~\mu W$  to 100~mW) into a 75 ohm load at frequencies between 100~kHz and 2~GHz.
- 11. CAL FACTOR data is provided on a label attached to the Power Sensor's cover. Maximum uncertainty of the CAL FACTOR data is  $\pm 3.3\%$ , probable uncertainty of the data is  $\pm 2.5\%$ \*\*.

# 12. Accessories Supplied

13. The Model 8483A is supplied with an adapter (HP 1250-0597, shown in Figure 1) for joining the Power Sensor's 75 ohm Type N connector to the 50 ohm power reference connector on the power meter. This accessory is a mechanical adapter only and does not affect the input impedance of the Power Sensor or the output impedance of the power reference. Therefore an impedance mismatch exists and the meter should be calibrated to 96% of the power reference level at 50 ohms (e.g., 0.96 mW for the HP Model 435A).

Table 1. Specifications

Frequency Range: 100 kHz to 2 GHz. Maximum SWR (Reflection Coefficient):

1.8 (<0.286) 100 kHz to 600 kHz 1.18 (<0.082) 600 kHz to 2 GHz.

RF Impedance: 75 ohms nominal.

Maximum Average Power: 300 mW.

Maximum Peak Power: 10W.

Maximum Energy Per Pulse: 30 W-µs.

RF Connector: Type N Male  $(75\Omega)$ . Power Sensor Calibration: Cal Factor data individually calibrated for each power sensor.

Dimensions (includes RF Connector): 30 mm wide, 38 mm high, 105 mm long (1-3/16 x 1-1/2 x 4-1/8 in.).

Weight: Net, 0.2 kg (6 oz.).

<sup>\*</sup>Includes uncertainty of reference standard and transfer uncertainties. Directly traceable to NBS.

<sup>\*\*</sup>Square root of the sum of the individual uncertainties squared (RSS).

# CAUTION

Remove mechanical adapter from the Power Sensor before connecting the sensor to a 75 ohm source.



Figure 1. Mechanical Adapter

# 14. Recommended Test Equipment

15. Table 2 lists the test equipment recommended to check, adjust and repair the Model 8483A. If substitute equipment is used it should meet or exceed the listed critical specifications.

#### 16. INSTALLATION

# 17. Initial Inspection

18. Inspect the shipping container for damage. If the shipping container or packing material is damaged it should be kept until the contents of the shipment have been checked mechanically and electrically. If there is mechanical damage or if the instrument does not pass the performance tests, notify the nearest Hewlett-Packard office. Keep the damaged shipping materials (if any) for the carrier and a Hewlett-Packard representative to inspect. The HP office will arrange for repair or replacement without waiting for claim settlement.

# 19. Storage and Shipment

**20.** Environment. The instrument should be stored in a clean, dry environment. The following environmental limitations apply to both storage and shipment:

Table 2. Recommended Test Equipment

Instrument Type	Critical Specifications	Suggested Model	Use*	
Digital Voltmeter	Range: 100 mVdc to 100 Vdc Input Impedance: 100 M-ohm Resolution: 4-digit Accuracy: ± 0.05% ± 1 digit	HP 3439A/3443A	Т	
Oscilloscope	Bandwidth: dc to 50 MHz Sensitivity: Vertical, 0.2V/div. Horizontal, 1 ms/div.	HP 180A/1801A/ 1821A	А, Т	
10:1 Divider Probe	10 M-ohm 10 pF	HP 10004B	A	
Ohmmeter	Range: 1 ohm to 100 k-ohm Accuracy: ±5%	HP 412A	Т	
DC Power Supply	Range: 0–20 Vdc Load Regulation: 0.01% +4 mV	HP 6204B	Т	

<sup>\*</sup>A = Adjustment; T = Troubleshooting

- a. Temperature, -40 to +75°C
- b. Humidity, less than 95% relative
- c. Altitude, less than 25,000 feet.
- **21.** Packaging. The following general instructions should be used for re-packaging with commercially available materials:
- a. Wrap the instrument in heavy paper or plastic. If shipping to a Hewlett-Packard office or service center, attach a tag indicating the type of service required, return address, model number, and full serial number.
- b. Use a strong shipping container. A double-wall carton made of 200 pound test material is adequate.
- c. Use enough shock-absorbing material around all sides of the instrument to provide firm cushion and prevent movement inside the container.
  - d. Seal the shipping container securely.
- e. Mark the shipping container FRAGILE to assure careful handling.

#### 22. Interconnections

23. Refer to the power meter operating and service manual for interconnecting instructions.

#### 24. OPERATION

#### 25. Environment

- 26. The operating environment of the 8483A should be within the following limitations:
  - a. Temperature, 0 to 55°C
  - b. Humidity, less than 95% relative
  - c. Altitude, less than 15,000 feet.

#### 27. Operating Precautions

28. Precautions must be taken not to exceed the maximum allowable RF input level for the 8483A. Refer to the operation section of the

power meter manual for operating instructions pertaining to the complete power meter system.

# CAUTIONS

The maximum RF voltage which may be safely coupled to this Power Sensor is 4.74 Vrms. Exceeding this limit may damage the Power Sensor, power meter, or both.

BEFORE CONNECTING THE POWER SENSOR TO ANOTHER INSTRUMENT, ensure that the instrument and power meter are connected to the protective (earth) ground.

Exceeding the energy and power levels shown in Figures 2, 3, and 4 may result in damage to the power meter system.

Do not apply torque to the Power Sensor's body while connecting or disconnecting the Type N RF connector.

- 29. The absolute maximum RF signal level that may be coupled to the 8483A Power Sensor is:
  - a. Maximum Average Power . . . 300 mW
  - b. Maximum Peak Power . . . . 10W
  - c. Maximum Energy Per Pulse . 30 W-μs
- 30. Figure 2 expresses the absolute maximum energy input in graphical form. Figures 3 and 4 show the maximum levels that may be indicated by the power meter, as they relate to pulse repetition frequency (PRF) and duty cycle, and still be within the allowable energy levels expressed in Figure 2.

# 31. SWR (REFLECTION COEFFICIENT) PERFORMANCE TEST

32. To verify the Power Sensor's SWR and reflection coefficient specifications, use any system whose measurement uncertainties for SWR are equal to or less than those listed in the following table.

Frequency	System SWR Uncertainty	Actual Measurement	Maximum SWR (Reflection Coefficient)
100 kHz to 600 kHz	±0.08		1.8 (<0.286)
600 kHz to 2 GHz	±0.02		1.18 (<0.082)

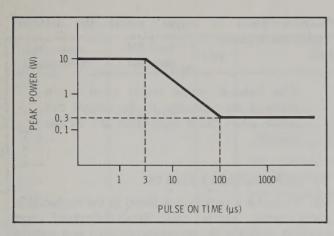


Figure 2. Maximum Energy Input to Power Sensor

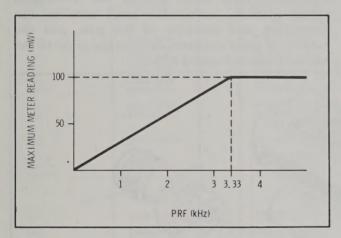


Figure 3. Maximum Power Reading vs Pulse Repetition Frequency (Pulse Width < 100 µs)

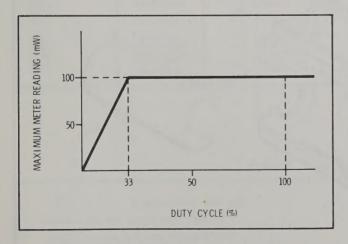


Figure 4. Absolute Maximum Power Meter Reading vs Duty Cycle (Pulse Width > 100 µs)

#### 33. FET BALANCE ADJUSTMENT

#### NOTE

A2C2 and A2C7 are factory selected components and are identified on the schematic and parts list with an asterisk (\*). (Only one of the two capacitors or possibly neither capacitor will be in the circuit.) The nominal value is shown but the actual value and part number may be different.

34. Description. If the A2A1 FET Assembly is replaced, it may be necessary to change the value of A2C2 or A2C7. The selected capacitor is used to balance the gate-to-drain capacitance of one FET to that of the other FET. This balances the Sampling Gate circuitry and reduces the amplitude of switching transients (spikes). The transient amplitude is monitored with an oscilloscope while the capacitors and capacitor values are changed. The selection procedure is complete when the transient amplitude is minimized. The capacitor will be coupled across the gate and drain leads of the FET with the lower capacitance.

#### NOTE

Transient amplitude is also affected by the relative positions of the 90 (white/black) and 91 (white/brown) wires which connect the A2 assembly and J1. Minor adjustments to the amplitude can be made by repositioning these wires. Therefore, it is important that their positions are not disturbed once minimum transient amplitude is attained.

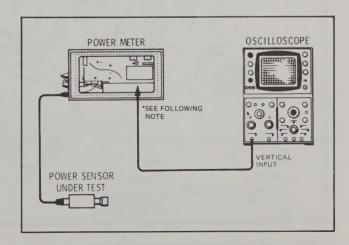


Figure 5. FET Balance Equipment Setup

#### NOTE

The correct test point for monitoring transient spikes is located at the output of the last ac amplifier of the power meter. (For the HP Model 435A, use A4TP4.)

- **35.** Equipment. Any oscilloscope whose specifications meet or exceed the critical specifications listed in Table 2 for HP 180A/1801A/1821A should be used.
- 36. Procedure. Connect the equipment as shown in Figure 5. Set the power meter range control to  $3 \,\mu W$ . Check the amplitude of the switching transients (spikes) on the oscilloscope display. If A2C2 or A2C7 is in the circuit, vary its value between 1 and 10 pF until the balance point (minimum spike amplitude) is found. If the balance point is not reached, remove the capacitor and follow the same procedure using the other capacitor location (A2C2 or A2C7). When the

balance point is found, solder the selected capacitor in place.

#### NOTE

The balance point might exist when there is no capacitor in the circuit but never when both capacitors are in the circuit.

#### 37. REPLACEABLE PARTS

- 38. To order a part that is listed in the replaceable parts table, quote the Hewlett-Packard part number, indicate the quantity required and address the order to the nearest Hewlett-Packard office.
- 39. To order a part that is not listed in the replaceable parts table, include the instrument model number, instrument serial number, the description and function of the part, and the number of parts required. Address the order to the nearest Hewlett-Packard office.

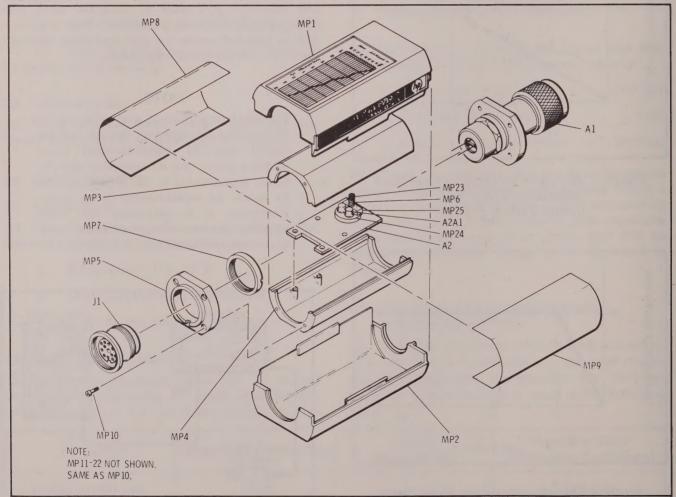


Figure 6. Illustrated Parts Breakdown

Table 3. Replaceable Parts

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
Al	08483-60002	1	BULKHEAD ASSY	28480	08483-60002
A1C1 A1C2 A1C3			NOT SEPARATELY REPLACEABLE, P/O A1 NOT SEPARATELY REPLACEABLE, P/O A1 NOT SEPARATELY REPLACEABLE, P/O A1		
ÁlJI			NOT SEPARATELY REPLACEABLE, P/O.A1		
AIRI		1	NOT SEPARATELY REPLACEABLE, P/O A1		
AlTCI			NOT SEPARATELY REPLACEABLE, P/O A1		
41101	1.0				
Δ2	08483-60001	1	INPUT AMPLIFIER ASSY	28480	08483-60001
A2C1 A2C2*	0180-0556 0160-3872	1 2	CAPACITOR-FXD 27UF +-20% 15VDC TA-SOLID CAPACITOR-FXD 2-2PF +-25PF 200WVDC GER SEE FET BALANCE ADJUSTMENT	12954 28480	D27GS1B15M 0160-3872
A2C3 A2C4	0180-2515 0160-3094	1 1	CAPACITOR-FXD; 47UF+-20% 6VDC TA-SOLID CAPACITOR-FXD .1UF +-10% 100WVDC CER	56 28 9 28 48 0	196D476 X0006KA1 0160-3094
A2C5 A2C6 A2C7*	0160-3879 0180-2545 0160-3872	1 1	CAPACITOR-FXD .01UF +-20% 100WVDC CER CAPACITOR-FXD; 100UF+-20% 4VDC TA-SOLID CAPACITOR-FXD 2.2PF +25PF 200WVDC CER	28480 56289 28480	0160-3879 1960107X0004KE3 0160-3872
			SEE FET BALANCE ADJUSTMENT TRANSISTOR:SI NPN	28480	1854-0610
A201	1854-0610	1	RESISTOR 787K 1% .125W F TUBULAR	30983	MF5C1/8-T0-7873-F
A 2R 1 A 2R 2 A 2R 3 A 2R 4 A 2R 5	0698-8352 0698-7248 0698-7236 0698-7236 0698-7224	1 1 3	RESISTOR 3-16K 2% -125W F TUBULAR RESISTOR 1K 2% -125W F TUBULAR RESISTOR 1K 2% -125W F TUBULAR RESISTOR 316 OHM 2% -125W F TUBULAR	24546 24546 24546 24546	C3-1/8-T0-3161-G C3-1/8-T0-1001-G C3-1/8-T0-1001-G C3-1/8-T0-316R-G
A2R 6 A2R 7	0698-7236 0811-3210	1	RESISTOR 1K 2% -125W F TUBULAR RESISTOR 31-6 OHM 5% -05W PWW TUBULAR POS TEMPERATURE COEF 0-5%°C	24546 14140	C3-1/8-T0-1001-G 1409-1/20-31R6-J
A 2 A 1	08481-60002	1	FET ASSY	28480	08481-60002
A2A1Q1 A2A1Q2 A2A1Q3		7	NOT ASSIGNED NOT SEPARATELY REPLACEABLE, P/O A2A1 NOT SEPARATELY REPLACEABLE, P/O A2A1		
			CHASSIS PARTS		
	1251-3228	1	CONNECTOR, 12-CONT, FEM, CIRC AUDIO	28480	1251-3228
J1 MP1	08481-40002	2	SHELL, PLASTIC	28480 28480	08481-40002 08481-40002
MP2 MP3 MP4 MP5	08481-40002 08481-20011 08481-20011 08481-20008	2	SHELL, PLASTIC CHASSIS CHASSIS ENDBELL	28480 28480 28480	08481-20011 08481-20011 08481-20008
MP6 MP7 MP8 MP9	1460-1330 1251-3363 08481-00002 08481-00002	1 1 2	SPRING; COMPRESSION; CYLINDER NUT:CONNECTOR MOUNTING SHIELD SHIELD	28480 28480 28480 28480	1460-1330 1251-3363 08481-00002 08481-00002
MP10- MP22	3030-0422	13	SCREW-SKT HD CAP 0-80 HD HEX REC SST	28480	3030-0422
MP23 MP24 MP25 MP26 MP27	3030-0436 0 8481-40003 0 8481-40004 7 120-4204 1 250-0597	1 1 1 1 1 1	SCREW-SKT HD CAP 0-80 HD HEX REC SST SPACER, FET CLAMP,LEAD LABEL, ID ADAPTER, TYPE N 75-50 DHM	28480 28480 28480 28480 28480	3030-0436 08481-40003 08481-40004 7120-4294 1250-0597

Table 4. Code List of Manufacturers

MFR NO. MANUFACTURER NAME	ADDRESS	ZIP
12954 DICKSON ELECTRONICS CORP	SCOTTSDALE AZ	85252
14140 EDISON ELEK DIV MCGRAW-EDISON 24546 CORNING GLASS WORKS 28480 HEWLETT-PACKARD CO CORPORATE HO 30983 MEPCO/FLECTRA CORP 56289 SPRAGUE ELECTRIC CO	MANCHESTER NH BRADFORD PA PALO ALTO CA SAN DIEGO CA NORTH ADAMS MA	03130 16701 94304 92121 01247

#### 40. SERVICE

- 41. Test equipment that meets or exceeds the critical specifications in Table 2 may be used in place of the recommended instruments for trouble-shooting the 8483A.
- 42. Figure 7 shows the locations of the assemblies and components of the Model 8483A and Figure 8 is the schematic diagram.

# 43. Principles of Operation

- 44. The thermocouples contained in the Model 8483A present a 75-ohm load to the RF signal coupled into the Power Sensor. As the RF signal is dissipated by the thermocouples, they generate a dc voltage that is proportional to the RF input power. This dc output is coupled to the FET sampling gate (chopper) circuit where it is sampled at a 220 Hz rate. The gate circuit output is therefore a 220 Hz ac signal whose amplitude is proportional to the RF input power. The ac signal is amplified approximately 750 times by a hybrid operational amplifier made up of the power meter's first amplifier and the Input Amplifier of the 8483A. Figure 10 is a simplified diagram showing the hybrid operational amplifier circuit configuration.
- 45. The Auto Zero Feedback circuit is coupled to the Power Sensor from the power meter. The dc voltage used to set the zero level is coupled across the input to the FET's by using A2R1, A1R1, and the series resistance (300 ohms) of the thermocouple A1TC1 as a voltage divider network.

### 46. Troubleshooting

- 47. It will be necessary to disassemble the Power Sensor to make the following measurements. Refer to Disassembly Procedures for important information and precautions.
- 48. A1 Bulkhead Assembly. The A1 assembly output is normally  $+12\pm3$  mVdc with a 100 mW input. Resistance measured across two gold wires leading to A2 assembly should be  $345\pm17.5$  ohms. (Excessive power will damage the thermocouples and cause their resistance to increase.) If the A1 Bulkhead Assembly is defective, the entire Bulkhead Assembly must be replaced.

# CAUTION

Be extremely careful when measuring across the gold wires; they are delicate and may be easily damaged.

- **49. Gate Drive.** The multivibrator drive from the Power Sensor to the FET Sampling Gate circuit may be checked at the FET metal case. This drive voltage is a 220 Hz square wave whose positive level is  $-0.05 \pm 0.05$  Vdc and negative level is >9V more negative.
- 50. Hybrid Operational Amplifier. In most cases it may be assumed that the operational amplifier, made up of the Input Amplifier and the first amplifier in the power meter is operating correctly if the dc voltage found on the metal case of A2Q1 is  $-70 \pm 30$  mVdc.
- **51.** A2A1 FET Assembly. FET's A2A1Q2 and Q3 may be checked by measuring source-drain resistance while biasing the FET's on and off.
- a. Remove the power sensor cable from the 8483A.
- b. Remove the upper chassis of the 8483A. See Upper Chassis Removal.
- c. Set the output of a dc power supply to 10V.
- d. Connect the positive lead of the power supply to the positive side of A2C3.
- e. Connect one lead from an ohmmeter to the power supply positive lead and the other to chassis ground. Verify the resistance is less than 40 ohms.
- f. Bias both FET's off by connecting the negative power supply lead to both FET metal cases (gates). If the resistance increases:
  - 1) <10 ohms, A2A1Q3 is probably defective.
  - 2) 300 to 400 ohms, A2A1Q2 is probably defective.
  - 3) several hundred times, both FET's are functioning properly.

#### NOTES

- 1. If either FET is defective, the entire A2A1 FET Assembly must be replaced.
- 2. If the FET's are replaced, it is recommended that the FET Balance Adjustment be performed in order to bring the 8483A to its maximum operating capability.

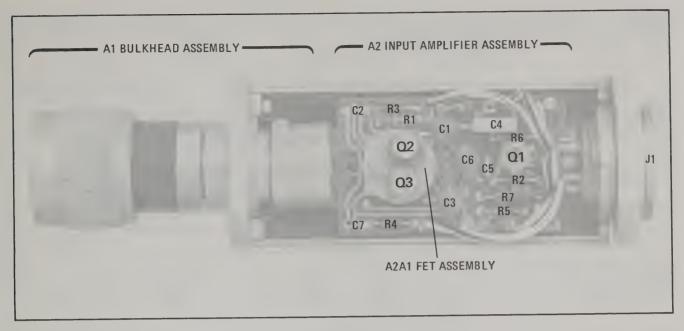


Figure 7. Model 8483A Assembly and Component Locations

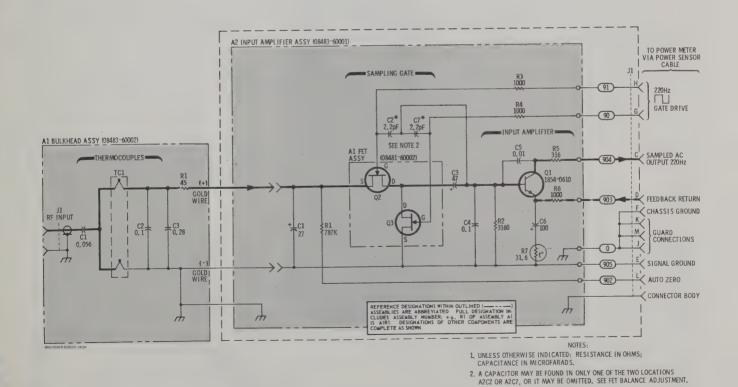


Figure 8. Model 8483A Schematic Diagram

Page 10 Model 8483A

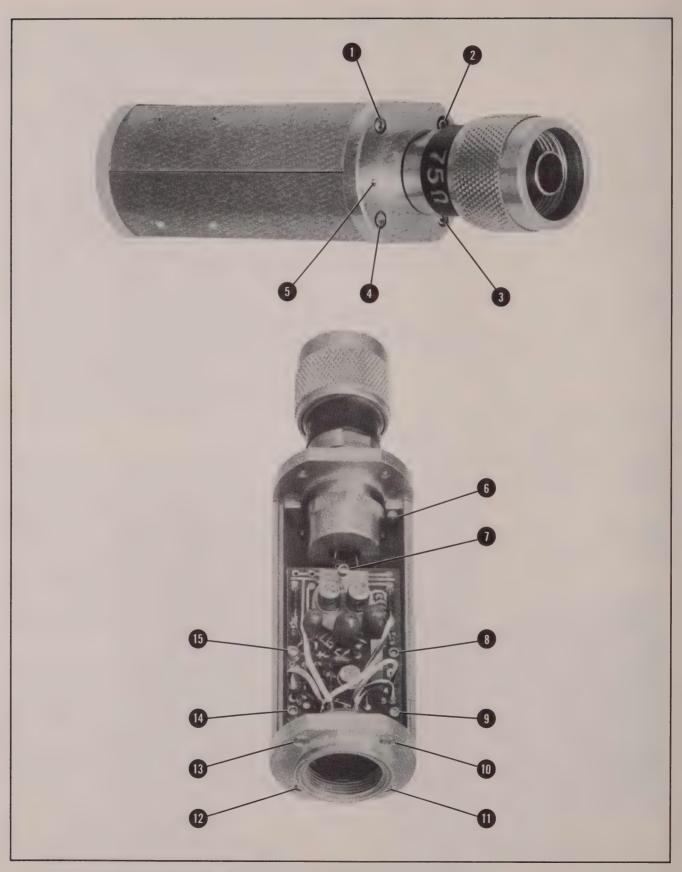


Figure 9. Power Sensor Hardware Locations

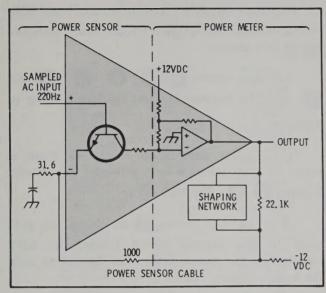


Figure 10. Hybrid Operational Amplifier

### 52. Disassembly Procedures

53. The upper chassis removal should always be done first to avoid damaging the gold wires connecting the A1 Bulkhead Assembly and the A2 Input Amplifier Assembly. (If the gold wires are damaged the Bulkhead Assembly must be returned to the factory for repair.) Then either the A1 Bulkhead Assembly or the A2 Input Amplifier Assembly may be removed. FET Assembly removal should take place after A2 assembly removal.

# CAUTION

Do not attempt disassembly of the Type N connector. Doing so may damage the thermocouple substrate.

The gold wires connecting the A1 Bulk-head Assembly and the A2 Input Amplifier Assembly are extremely delicate and may be easily broken. Be careful when working around them.

### 54. Upper Chassis Removal

- a. Insert the blade of a small screwdriver between the two-piece plastic shell at the rear of the Power Sensor. Gently pry the sections apart.
- b. Proceed to the other side of the connector and again pry the cover sections apart. Remove the shells and magnetic shields.
- c. Position the Power Sensor as shown in Figure 9 (top). The small hole 5 should be on the left side of the RF input connector. Remove

the allen cap screws 1, 2, 10, and 13. Loosen 11 and 12. Remove the upper chassis from the Power Sensor.

# 55. A1 Bulkhead Assembly Removal

- a. Remove the spring clamp cap screw to free the gold leads which come from the Bulkhead Assembly.
  - b. Remove cap screws 3, 4, and 6.
- c. Slide the Bulkhead Assembly straight out from the chassis.

# 56. A2 Input Amplifier/J1 Connector Removal

- a. Remove the spring clamp cap screw to free the gold leads which come from the Bulkhead Assembly.
- b. Remove cap screws **8**, **9**, **11**, **12**, **14** and **15**.
- c. Slide the A2 Input Amplifier and J1 connector straight out from the chassis.

# 57. FET Assembly Removal

# CAUTION

Excessive heat from the soldering iron when installing or removing the assembly, may destroy the FET internal circuitry. Before removing the FET Assembly be sure that it must be replaced. The Troubleshooting information gives the correct procedures for verifying that the FET's are defective.

- a. Remove the A2 Input Amplifier Assembly.
- b. Remove the cap screw, compression spring, and lead clamp from the A2A1 FET Assembly.
- c. Remove the adhesive bonding which covers the FET pin connectors to the printed circuit board.
- d. With a desoldering tool, remove the solder from the six pins which hold the FET Assembly in place.
- e. Carefully break each pin loose from the printed circuit board with a soldering aid tool.
- f. Gently lift the FET Assembly and spacer from the circuit board. Refer to Figure 11.

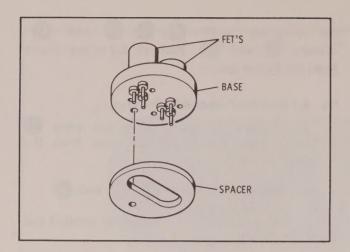


Figure 11. FET Assembly and Spacer

# 58. Reassembly Procedures

# CAUTION

The gold wires connecting the A1 Bulk-head Assembly and the A2 Input Amplifier Assembly are extremely delicate and may be easily broken. Be careful when working around them.

# 59. FET Assembly Installation

- a. Insert the FET Assembly leads through the spacer and printed circuit board.
- b. Insert the lead clamp compression spring and cap screw to hold the spacer and assembly in place against the printed circuit board. Refer to Figure 11.
- c. Solder the FET leads to the circuit board.

# CAUTION

# Excessive heat may damage the FET's.

- d. With hypodermic needle inject adhesive bonding\* into the hollow portion of the spacer. To accomplish this, insert the needle into the hole in the circuit board directly beneath the FET Assembly.
- e. Cover the soldered connections of the FET Assembly with adhesive bonding.\*
- f. Cover the rest of the base of the A2 assembly circuit with an acrylic coating.\*\*

# 60. A2 Input Amplifier/J1 Connector Reassembly

- a. Slide the printed circuit board and connector into place.
- b. Cap screws 8, 9, 11, 12, 14, and must be inserted but not tightened. Refer to Figure 9.
- c. Center the circuit board so there is equal air gap between each side and the chassis. Tighten 8, 9, 14, and 15.
- d. Use cap screw 1 to clamp the gold leads to the printed circuit board. DO NOT overtighten the clamp screw. Let the spring hold the leads in place.
- e. Bend A2C6 so that it touches A2Q1. Bend A2C1 and A2C3 until they touch A2C6.

# 61. A1 Bulkhead Assembly Reinstallation

- a. Secure the Bulkhead Assembly to the chassis by inserting cap screw 6. Do not tighten the screw at this time.
- b. Insert cap screws 3 and 4; tighten only cap screw 6.
- c. Use cap screw 7 to clamp the gold leads to the printed circuit board. DO NOT overtighten the clamp screw. Let the spring hold the leads in place.

# 62. Upper Chassis Reassembly

- a. The upper chassis should be placed in position and cap screws 1, 2, 10, and 13 should be inserted.
  - b. Tighten 1, 2, 3, and 4.
  - c. Tighten 10, 11, 12, and 13.
- d. Place the plastic shells, magnetic shields, and the chassis together as shown in Figure 6. Snap the plastic shells together.

<sup>\*3140</sup> RTV Coating, Silicone Rubber, Dow Corning Corporation, Midland, Michigan, 48640 (HP 0470-0440).

<sup>\*\*</sup>Krylon No. 1302 Crystal Clear coating, Borden Chemicals, Krylon Dept., Norriston, Pennsylvania, or, Plastic 707, United Technical Lab, Morristown, New Jersey (HP 6010-0140).

#### HEWLETT · PACKARD

# ELECTRONIC INSTRUMENTATION SALES AND SERVICE

#### UNITED STATES, CENTRAL AND SOUTH AMERICA, CANADA

#### UNITED STATES

ALABAMA 8290 Whitesburg Dr., S.E. P.O. Box 4207 Wunstville 35802 Tel: (205) 881-4591 TWX: 810-726-2204

ARIZONA 2336 E. Magnolia St. Phoenix 85034 Tel: (602) 244-1361 TWX: 910-951-1330 2424 East Aragon Rd. Tucson 85706 Tel: (602) 889-4661

CALIFORNIA 1430 East Orangethorpe Ave.

3939 Lankershim Boulevard North Hollywood 91604

6515 Arizona Place Los Angeles 90045 Tel: (213) 776-7500 TWX: 910-328-6148

1101 Embarcadero Road Palo Alto 94303 Tel: (415) 327-6500 TWX: 910-373-1280

2220 Watt Ave. Sacramente 95825 Tel: (916) 482-1463 TWX: 910-367-2092

9606 Aero Drive P.O. Box 23333 San Diego 92123 Tel: (714) 279-3200 TWX: 910-335-2000

COLORADO

CONNECTICUT
12 Lunar Drive
New Haven 06525
Tel: (203) 389-6551
TWX: 710-465-2029

FLORIDA P.O. Box 24210 P U. BOX 24210 2806 W. Oakland Park Blvd. Ft. Lauderdale 33307 Tel: (305) 731-2020 TWX: 510-955-4099

P.O. Box 13910 6177 Lake Ellenor Dr. Oriando, 32809 Tel: (305) 859-2900 TWX: 810-850-0113

GEORGIA
P.O. Box 28234
450 Interstate North
Atlanta 30328
Tel: (404) 436-6181
TWX: 810-766-4890

HAWAII 2875 So. King Street Honolulu 96814 Tel: (808) 955-4455

ILLINOIS 5500 Howard Street 5500 Howard Street Skokle 60076 Tel: (312) 677-0400 TWX: 910-223-3613

INDIANA 3839 Meadows Drive Indianapolis 46205 Tel: (317) 546-4891 TWX: 810-341-3263

IOWA 1902 Broadway Iowa City 52240 Tel: (319) 338-9466 Night: (319) 338-9467

LOUISIANA P. O. Box 840 3239 Williams Boulevard Kenner 70062 Tel: (504) 721-6201 TWX: 810-955-5524 MARYLAND

6707 Whitestone Roa Baltimore 21207 Tel: (301) 944-5400 TWX: 710-862-9157 20010 Century Blvd. Germantown 20767 Tel: (31) 428-0700

P.O. Box 1648 2 Choke Cherry Road Rockville 20850 Tel: (301) 948-6370 TWX: 710-828-9684

MASSACHUSETTS

MICHIGAN 23855 Research Drive Farmington 48024 Tel: (313) 476-6400 TWX: 810-242-2900

MINNESOTA 2459 University Avenue St. Paul 55114 Tel: (612) 645-9461 TWX: 910-563-3734

MISSOURI 11131 Colorado Ave. Kansas City 64137 Tel: (816) 763-8000 TWX: 910-771-2087

148 Weldon Parkway Maryland Heights 63043 Tel: (314) 567-1455 TWX: 910-764-0830

\*NEVADA Las Vegas Tel: (702) 382-5777

NEW JERSEY W. 120 Century Rd. Paramus 07652 Tel: (201) 265-5000 TWX: 710-990-4951

NEW MEXICO P.O. Box 8366 Station C 6501 Lomas Boulevard N.E. Albuquerque 87108 Tel: (505) 265-3713 TWX: 910-989-1665

156 Wyatt Drive Las Cruces 88001 Tel: (505) 526-2485 TWX: 910-983-0550

NEW YORK 6 Automation Lane 6 Automation Lane Computer Park Albany 12205 Tel: (518) 458-1550 TWX: 710-441-8270

1219 Campville Road Endicott 13760 Tel: (607) 754-0050 TWX: 510-252-0890

New York City Manhattan, Bronx Manhattan, Bronx Contact Paramus, NJ Office Tel: (201) 265-5000 Brooklyn, Queens, Richmond Contact Woodbury, NY Office Tel: (516) 921-0300

82 Washington Street Poughkeepsle 12601 Tel: (914) 454-7330 TWX: 510-248-0012

39 Saginaw Drive Rechester 14623 Tel: (716) 473-9500 TWX: 510-253-5981

5858 East Molloy Road Syracuse 13211 Tel: (315) 454-2486 TWX: 710-541-0482

1 Crossways Park West Woodbury 11797 Tel: (516) 921-0300 TWX: 510-221-2168

NORTH CAROLINA P.O. Box 5188 1923 North Main Street High Point 27262 Tel: (919) 885-8101 TWX: 510-926-1516

SOUTH CAROLINA 6941-0 N. Trenholm Road Columbia 29260 Tel: (803) 782-6493

DHIO 16500 Sprague Road Cleveland 44130 Tel: (216) 243-7300 Night: 243-7305 TWX: 810-423-9431

330 Progress Rd. Dayton 45449 Tel: (513) 859-8202 TWX: 810-459-1925 6665 Busch Blvd. Columbus 43229 Tel: (614) 846-1300

OKLAHOMA P.O. Box 32008 Oklahoma City 73132 Tel: (405) 721-0200 TWX: 910-830-6862

DREGON 17890 SW Boones Ferry Road Tualatin 97062 Tel: (503) 620-3350 TWX: 910-467-8714

PENNSYLVANIA 111 Zeta Drive Pittsburgh 15238 Tel: (412) 782-0400 Night: 782-0401 TWX: 710-795-3124

1021 8th Avenue King of Prussia Industrial Park King of Prussia 19406 Tel: (215) 265-7000 TWX: 510-660-2670

RHODE ISLAND 873 Waterman Ave. East Providence 02914 Tel: (401) 434-5535 TWX: 710-381-7573

\*TENNESSEE Memphis Tel: (901) 274-7472 TEXAS
P.O. Box 1270
201 E. Arapaho Rd.
Richardson 75080
Tel: (214) 231-6101
TWX: 910-867-4723

P.O. Box 27409 6300 Westpark Drive Suite 100 Houston 77027 Tel: (713) 781-6000 TWX: 910-881-2645 231 Billy Mitchell Road San Antonio 78226 Tel: (512) 434-4171 TWX: 910-871-1170

UTAH 2890 South Main Street Salt Lake City 84115 Tel: (801) 487-0715 TWX: 910-925-5681

VIRGINIA
P.O. Box 9854
2914 Hungary Springs Road
Richmond 23228
Tel: (804) 285-3431
TWX: 710-956-0157 WASHINGTON Washington

Bellefield Office Pk. 1203 - 114th SE Bellevue 98004 Tel: (206) 454-3971 TWX: 910-443-2446

\*WEST VIRGINIA Charleston Tel: (304) 345-1640 Tel: (304) 345-1640 WISCONSIN 9431 W. Beloit Road Suite 117 Milwaukee 53227 Tel: (414) 541-0550

FOR U.S. AREAS NOT LISTED: Contact the regional office near-est you: Atlanta, Georgia ... North Hollywood, California ... Paramus, New Jersey ... Skokle, Illinois. Their complete ad-dresses are listed above. \*Service Only

#### CENTRAL AND SOUTH AMERICA

ARGENTINA Hewlett-Packard Argentina S.A.C.e.! Lavalle 1171 - 3° Buenos Aires Tel: 35-0436, 35-0627, 35-0341 Telex: 012-1009 Cable: HEWPACK ARG

BOLIVIA Stambuk & Mark (Bolivia) LTDA. Av. Mariscal, Santa Cruz 1342 La Paz
Tel: 40626, 53163, 52421
Telex: 3560014
Cable: BUKMAR

BRAZIL
Hewlett-Packard Do Brasil
I,E.C. Ltda.
Rua Frei Caneca 1119
01307-Sao Paulo-SP
Tel: 288-7111, 287-5858
Telex: 309151/2/3
Cable: HEWPACK Sao Paulo

Hewlett-Packard Do Brasil I.E.C. Ltda. Praca Dom Fellciano, 78 90000-Porto Alegre-RS Rio Grande do Sul (RS) Brasil Tel: 25-8470 Cable: HEWPACK Porto Alegre

Hewlett-Packard Do Brasil I.E.C. Ltda. Rua da Matriz, 29 20000-Rio de Janeiro-GB Tel: 266-2643 Telex: 210079 HEWPACK Cable: HEWPACK Rio de Janeiro

CHILE Héctor Caicagni y Cia, Ltda. Casilia 16.475 Santiago Tel: 423 96 Cable: CALCAGNI Santiago

COLOMBIA
Instrumentación
Henrik A. Langebaek & Kier S.A.
Carrera 7 No. 48-59
Apartado Aéreo 6287
Bagota, 1 D.E.
Tel: 457-8-06, 45-55-46
Cable: AARIS Bagota
Telex: 44400INSTCO

COSTA RICA Lic. Alfredo Gallegos Gurdián Apartado 10159 San José Tel: 21-86-13 Cable: GALGUR San José

ECUADOR Laboratorios de Radio-Ingenieria Calle Guayaquil 1246 Post Office Box 3199 Quito Tel: 212-496; 219-185 Cable: HORVATH Quito

EL SALVADOR
Electronic Associates
Apartado Postal 1682
Centro Comercial Gigante
San Salvador, El Salvador C.A.
Paseo Escalon 4649-4° Piso
Tel: 23-44-60, 23-32-37
Cable: ELECAS

GUATEMALA IPESA Avenida La Reforma 3-48, Zona 9 Zona 9 Guatemala Tel: 63627, 64736 Telex: 4192 TELTRO GU

MEXICO
Hewlett-Packard Mexicana,
S.A. de C.V.
Torres Adalid No. 21, 11° Piso
Col. del Valle
Mexico 12, D.F.
Tel: 543-42-32
Telex: 017-74-507

NICARAGUA Roberto Terán G. Apartado Postal 689 Edificio Terán

Managua Tel: 3451, 3452 Cable: ROTERAN Managua

PARAGUAY Z. J. Melamed PARAGUAY
Z. J. Melamed S.R.L.
Division: Aparatos y Equipos
Medicos
Division: Aparatos y Equipos
Scientificos y de
Investigacion
P.O. Box 676
Chile, 482, Edificio Victoria
Asuncion
Tel: 4-859, 4-6272
Cable: RAMEL PERU Compañia Electro Médica S.A. Ave. Enrique Canaual 312 San Isidro Casilla 1030

Lima Tel: 22-3900 Cable: ELMED Lima PANAMA
Electrónico Balboa, S.A.
P.O. Box 492
Ave. Manuel Espinosa No. 13-50
Big. Alina
Panama City
Panama City
Panama City
Cel. 230933
Telex: 3481103, Curunda,
Cable: ELECTRON Panama City
Canal Zone
Cable: CELOTRON Panama City
Cable: ARTONICS San Juan
Telex: SATRONICS San Juan URUGUAY
Pablo Ferrando S.A.
Comercial e Industrial
Avenida Italia 2877
Casilla de Correo 370
Montevidee
Tel: 40-3102
Cable: RADIUM Montevideo

VENEZUELA Hewlett-Packard de Venezuela C.A. Apartado 50933 Apartado 50933 Edificio Segre Tercera Transversal Los Ruices Norte Caracas 107 Tel: 35-00-11 Telex: 21146 HEWPACK Cable: HEWPACK Caracas

FOR AREAS NOT LISTED.

CONTACT:

#### CANADA

ALBERTA Hewlett-Packard (Canada) Ltd. 11748 Kingsway Ave. Edmonton TSG 0X5 Tel: (403) 452-3670 TWX: 610-831-2431

Hewlett-Packard (Canada) Ltd. 915-42 Avenue S.E. Calgary T2G 1Z1 Tel: (403) 262-4279

BRITISH COLUMBIA Hewlett-Packard (Canada) Ltd. 837 E. Cordova Street Vancouver V6A 3R2 Tel: (604) 254-0531 TWX: 610-922-5059

MANITOBA Hewlett-Packard (Canada) Ltd. 513 Century St. St. James Winnipeg R3H OLB Tel: (204) 786-7581 TWX: 610-671-3531

NOVA SCOTIA Hewlett-Packard (Canada) Ltd. 2745 Dutch Village Rd. Halifax B3L 4G7 Tel: (902) 455-0511 TWX: 610-271-4482

ONTARIO Hewlett-Packard (Canada) Ltd. 1785 Woodward Dr. Ottawa K2C OP9 Tel: (613) 225-6530 TWX: 610-562-8968

Hewlett-Packard (Canada) Ltd. 6877 Goreway Drive Mississauga L4V 1L9 Tel: (416) 678-9430 TWX: 610-492-4246

QUEBEC Hewlett-Packard (Canada) Ltd. 275 Hymus Boulevard Pointe Claire H9R 1G7 Tel: (518) 561-5520 TWX- 610-422-3022 Telex: 05-821521 HPCL Hewlett-Packard (Canada) Ltd. 2376 Galvani Street Ste-Foy GIN 4G4 Tel: (418) 688-8710

FOR CANADIAN AREAS NOT LISTED: Contact Hewlett-Packard (Can-ada) Ltd. in Mississauga

EUROPE

Hewlett-Packard S.A. Rue du Bois-du-Lan 7 P.O. Box 85 CH-1217 Meyrin 2 Geneva Switzerland Tel: (022) 41 54 00 Cable: HEWPACKSA Geneva Telex: 2 24 86

AFRICA, ASIA, AUSTRALIA

Hewlett-Packard Export Trade Company 3200 Hillview Av. Palo Alto, California 94304 Tel: (415) 493-1501 TWX: 910-373-1267 Cable: HEWPACK Palo Alto Telex: 034-8300, 034-8493



HP Part No. 08483-90001 Printed in U.S.A.